
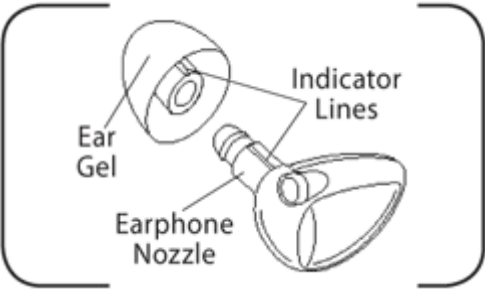
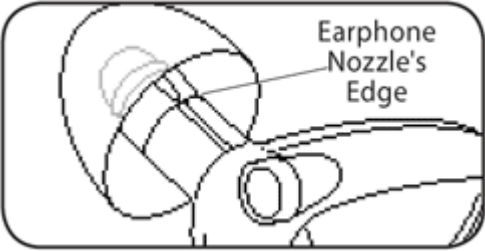



Quickstart Guide for Maximized Comfort, Fit & Bass

A proper fit is all about the size of the ear gels and aligning them properly. Out of the box, the Klipsch earphones are fitted with our medium-sized ear gels. While our research shows that almost 60% of users will prefer the single-flange, medium-sized gels, some earphone users will fall outside that norm. You can make substitutions later if the fit isn't perfect.


- Step 1
- 
- Diagram illustrating Step 1: An ear gel and an earphone nozzle are shown. The ear gel has two lines on its inner surface labeled "Indicator Lines". The earphone nozzle has a corresponding opening. The text "Ear Gel" and "Earphone Nozzle" are also present.
- Ensure that the indicator lines in the ear gel and earphone nozzle line up.
- Step 2
- 
- Diagram illustrating Step 2: An ear gel is being pressed onto the earphone nozzle. The text "Earphone Nozzle's Edge" points to the edge of the nozzle.
- Important:** Securely press the ear gel onto the earphone nozzle. The ear gel locks into place over the nozzle and should seat firmly against the nozzle's
- Step 3
- 
- Diagram illustrating Step 3: Two earphones are shown, one labeled "L" (Left) and one labeled "R" (Right).
- The left earphone is inscribed with an "L" and the right earphone is inscribed with an "R".
- Step 4
- 
- Diagram illustrating Step 4: A hand is shown inserting an earphone into an ear. The earphone is being pushed into the ear canal.
- Focus on sliding the oval ear gel into your ear to create a seal in your ear canal. Don't worry about forming the Flex Wire around your ear just yet.

Step
5

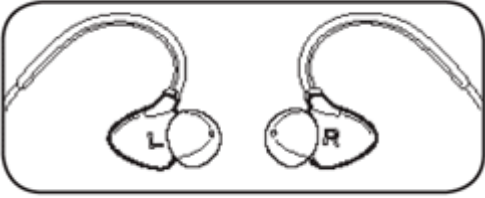

Once you have created a seal, hold the earphone in place and use your other hand to form the Flex Wire around your ear for a custom fit.

Step
6

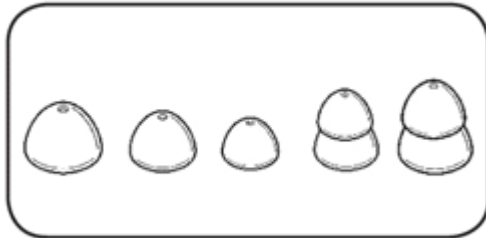

Now that you have a perfect seal you should hear very muffled ambient (outside) noise and your own voice should sound louder to you. If you do not experience this or you experience discomfort try one of the other ear gels included in your package and repeat steps 1 through 4.